


Gmate™ wheel

Quick Guide

REF

0604R1

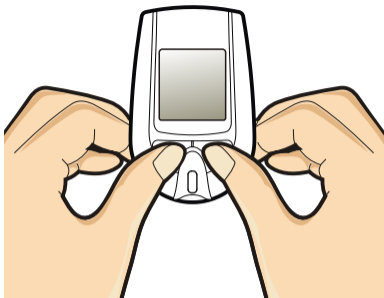

Press Shortly

To turn off the meter and
move to the next in setting mode

Press for 3 seconds

To enter the setting mode and
exit the setting mode


1




2




3

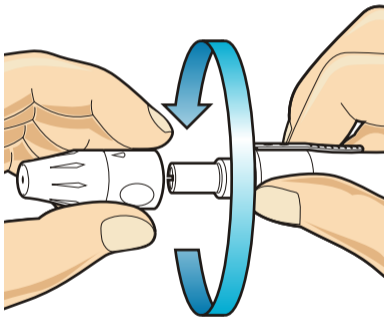


4

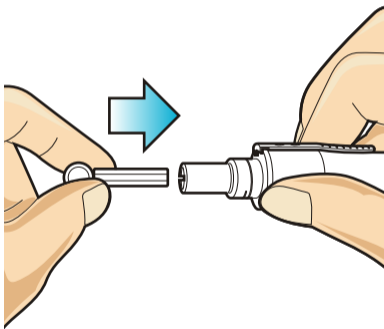


5

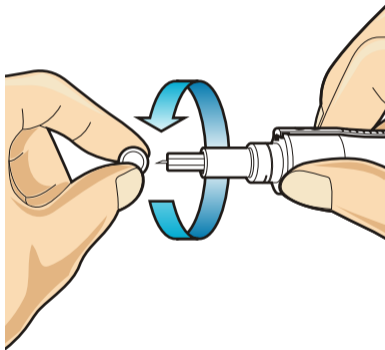


6

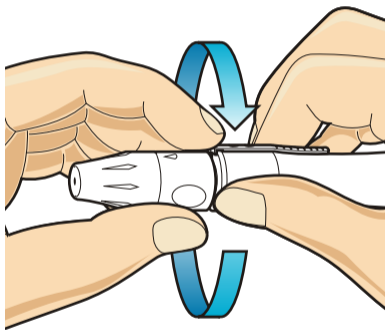


7

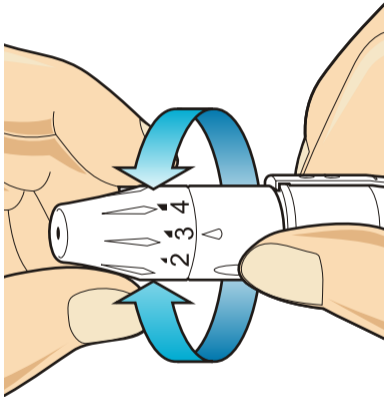

8

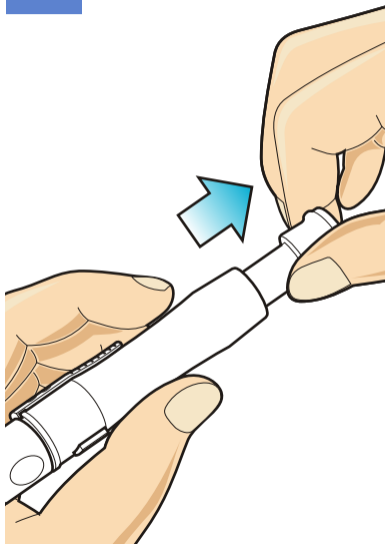


9

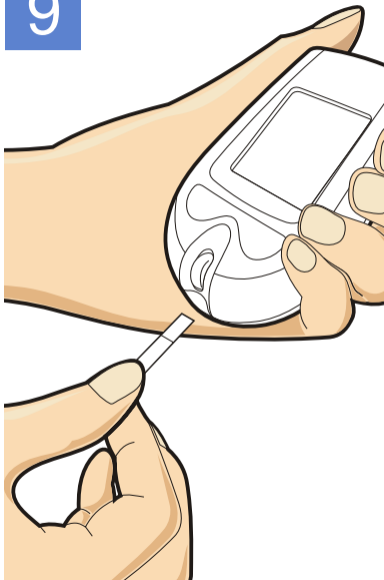


10




11

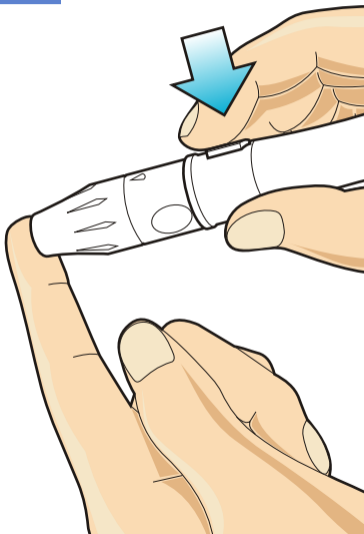

12

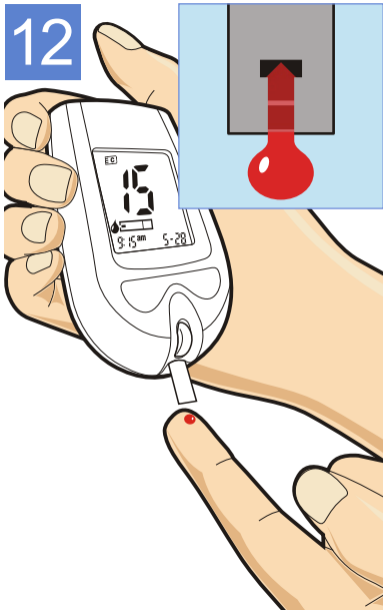

13

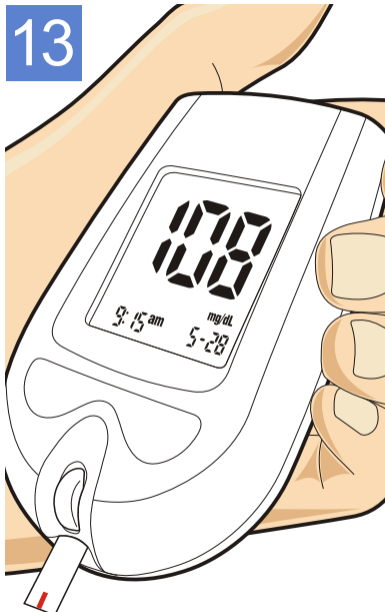



When inserting a used test strip.



When the meter has problem.



When environmental temperature is BELOW or ABOVE system operation range. (10~40°C, 50~104°F)